N05010/N10010

NON-SPRING RETURN DIRECT-COUPLED DAMPER ACTUATORS FOR MODULATING AND FLOATING / 2-POSITION CONTROL

PRODUCT DATA



GENERAL

This non-spring return direct-coupled damper actuator provides modulating and floating/2-position control for:

- air dampers,
- VAV units,
- air handlers,
- ventilation flaps,
- louvers, and
- reliable control for air damper applications with up to 1 m² / (5 Nm) and 2 m² (10 Nm) (seal-less damper blades; air friction-dependent).

FEATURES

- Declutch for manual adjustment
- Adjustable mechanical end limits
- Removable access cover for direct wiring
- Mountable in any orientation
- Function selection switch for selecting modulating or floating/2-position control

SPECIFICATIONS

Supply voltage Nominal voltage 24 Vac/dc -15%/+20%, 50/60 Hz 24 Vac/dc, 50/60 Hz

All values stated hereinafter apply to operation under nominal voltage conditions.

Power consumption

N05010 N10010 **Control signal** Modulating Floating/2-Position

Ambient limits Ambient operating limits

Ambient storage limits Relative humidity

Safety

Protection standard Protection class Overvoltage category

Lifetime

Full strokes Repositions

Mounting

Round damper shaft Square damper shaft Shaft length

End switches (when included) Rating 5 A Triggering points 5°/

Torque rating

Runtime for 90°

mod. (dc / 50/60 Hz ac) floating (dc / 60 Hz ac) floating (50 Hz ac)

Rotation stroke

Dimensions

Weight (without cables)

Noise rating

5 VA / 2 W 5 VA / 2 W

0...10 V 24 Vac/dc

-20...+60 °C (-5...+140 °F) -30...+80 °C (-22...+176 °F) 5...95%, non-condensing

IP54 II as per EN 60730-1 II

60000 1.5 million

8...16 mm 6...13 mm; 45° steps min. 41 mm

5 A (resistive), 3 A (inductive) 5° / 85° 5 Nm / 10 Nm

90 sec 90 sec 110 sec 95° ± 3° see "Dimensions" on page 8 450 g 35 dB(A) max. at 1 m

PRODUCT IDENTIFICATION SYSTEM



Fig. 1. Product Identification System

MODELS

order no.	supply voltage	end switches	torque	
N05010			5 Nm	
N05010-SW2	24 Vaa/da	2	5 MIII	
N10010	24 Vac/uc		10 Nm	
N10010-SW2		2	TUINII	

BASIC FEATURES



Fig. 2. Setting units and control elements

Legend for Fig. 2:

- 1) Universal shaft adapter
- 2) Mechanical end limits
- 3) Declutch button
- 4) Function selection switch
- 5) Removable access cover
- 6) Anti-rotation bracket

Contents of Package

The delivery package includes the actuator, parts 1 through 6 (see Fig. 2), plus two cable grommets and a spare cable grommet.

RUN MODES

The function selection switch (see Fig. 3) can be used to place the actuator into any one of three different modes: • Service/Off:

- the floating/2-position run mode ("Dir" for CCW-closing dampers or "Rev" for CW-closing dampers); and
- the modulating run mode.



Fig. 3. Function selection switch

Power-Off Behavior

If power is removed, the shaft adapter remains in position.

Service/Off

If the function selection switch is set to the "Service/Off" position, then all rotary movement is cancelled, and all control signals are ignored, thus allowing the actuator to be manually operated safely.

Floating/2-Position Run Mode

Without Feedback Signal

If, however, the function selection switch has been set to one of the two floating/2-position control settings – but the actuator has not been wired for a feedback signal (see Fig. 12 and Fig. 13) – then as soon as operating power is applied, the shaft adapter will run according to the control signals applied.

With Feedback Signal

If the function selection switch has been set to one of the two floating/2-position control settings – and if the actuator has been wired for a feedback signal (see Fig. 12 and Fig. 13) – then as soon as operating power is applied, the shaft adapter will likewise run first completely counterclockwise and then completely clockwise (see also section "Adaption"), after which it will run according to the control signals applied.

Modulating Run Mode

If the function selection switch has been set to one of the four modulating control settings – and if the actuator is wired correspondingly (see Fig. 11) – then as soon as operating power is applied, the shaft adapter will run first completely counterclockwise and then completely clockwise (see also section "Adaption"), after which it will run according to the control signals applied.

Table 1 describes, for the floating mode, the shaft adapter behavior ("stops," rotates "CCW," or rotates "CW") in dependence upon the control signals applied to terminals 3 and 4 and upon the function selection switch setting.

Table 2 describes, for the 2-position mode, the shaft adapter behavior ("stops," rotates "CCW," or rotates "CW") in dependence upon the control signals applied to terminals 3 and 4 and upon the function selection switch setting. Table 3 describes, for the modulating mode, the shaft adapter behavior ("stops," rotates "totally CCW," rotates "totally CW," runs to "proportional" position, or runs to "50%" of max. stroke) in dependence upon the control signals applied to terminals 3 and 4 and upon the function selection switch setting.

Table 1. Shaft adapter behavior in the floating mode

control signal at		switch settings				
terminal 3	terminal 4	0[2]10 V	Dir	Service / Off	Rev	100[2] V
open	open		stops	stops	stops	
open	24 Vac/dc		CCW	stops	CW	
24 Vac	open		CW	stops	CCW	

Table 2. Shaf	t adapter	behavior i	in the	2-position	mode
---------------	-----------	------------	--------	------------	------

control signal at		switch settings				
terminal 3	terminal 4	0[2]10 V	Dir	Service / Off	Rev	100[2] V
24 Vac	open		CW	stops	CCW	
24 Vac	24 Vac/dc		CCW	stops	CW	

Table 3. Shaft adapter behavior in the modulating mode

control signal at	switch settings					
terminal 3	terminal 4	0[2]10 V	Dir	Service / Off	Rev	100[2] V
open	open	totally CCW		stop		totally CCW
open	24 Vac/dc	50%		stop		50%
min control cignol plus 0.04 V	open	totally CCW		stop		totally CW
< mm. control signal plus 0.24 v	24 Vac/dc	50%		stop		50%
between min. control signal plus 0.24 V	open	proportional		stop		proportional
and max. control signal minus 0.24 V	24 Vac/dc	50%		stop		50%
max control signal minus 0.24 V	open	totally CW		stop		totally CCW
> max. control signal minus 0.24 V	24 Vac/dc	50%		stop		50%



Fig. 4. Final shaft adapter position in dependence upon control signal (example function selection switch setting of 0...10 V)



Fig. 5. Feedback signal in dependence upon current position of shaft adapter (example function selection switch setting of 0...10 V)

Adaption

Adaption is a function in which the actuator re-maps its feedback signal and control signal in accordance with repositioned mechanical end limits (see also Fig. 6) and thus recognizes their new positions.



Fig. 6. Adaption (function selection switch set to "0...10 V")

Adaption will be carried out whenever the actuator is in the modulating mode or the floating plus feedback mode or the 2-position plus feedback mode and

- the user powers up (from a totally powerless condition) the actuator; or
- the user sets the function selection switch to the "Service/Off" setting for at least 2 seconds and then back to its previous setting; or
- the control signal's value rises up into the upper dead band (i.e. to more than the max. control signal minus 0.24 V) or drops down into the lower dead band (i.e. to less than the min. control signal plus 0.24 V), after which the shaft adapter must then remain at the respective (upper or lower) mechanical end limit for at least 3 seconds. However, in this case, the actuator will then recognize the position of only the respective (upper or lower) mechanical end limit.

Overriding

An override is a condition in which a 24 V signal is applied to terminal 4 of an actuator in the modulating mode, thus causing the actuator to ignore the control signal at terminal 3, whereupon it will instead move to a position of 50% of its maximum stroke (see Table 3).

Feedback

If correspondingly wired (see Fig. 11, Fig. 12, and Fig. 13), the actuator provides, via terminal 5, a feedback signal proportional to the actual position of the shaft adapter.

MANUAL ADJUSTMENT

IMPORTANT

To prevent equipment damage, you must remove power or set the function selection switch to the "Service/Off" position before manual adjustment.

After removing power or setting the function selection switch to the "Service/Off" position, the gear train can be disengaged using the declutch button, permitting the shaft adapter to be manually rotated to any position. If you have wired the actuator for feedback signal, then, after adaption, the feedback signal will follow the new position.

Limitation of Rotation Stroke

Two adjustable mechanical end limits are provided to limit the angle of rotation as desired (see Fig. 7). The mechanical end limits must be securely fastened in place.



Fig. 7. Mechanical end limits

To ensure tight closing of the dampers, the shaft adapter has a total rotation stroke of 95° .

After adjusting the mechanical end limits, the user should trigger adaption (see section "Adaption").

INTERNAL END SWITCHES

NOTE: Only those actuators for which "-SW2" has been specified when ordering (e.g.: "N05010-SW2") feature internal end switches.

The internal end switches "A" and "B" are changeover switches which are activated when the shaft adapter moves past a position of 5° and 85°, respectively (see also Table 5).

changeo when shaf	ver swit t adapte	ch A act r moves	ivated past 5°	chang when sh	eover sv aft adap	witch B a ter move	activated es past 85°
-2.5° 0°	5°	10°	15°	75°	80 °	85°	90° 92.5°

Fig. 8. Internal end switch triggering points

To avoid personal injury (electrical shock) and to prevent equipment damage, before installation, you must remove power.

These actuators are designed for single-point mounting.

Mounting Instructions

All information and steps are included in the Installation Instructions (Product Literature No.: MU1B-0276GE51) supplied with each actuator.

Mounting Position

The actuators can be mounted in any position (IP54 is dependent upon orientation; see Fig. 9). Choose a mounting position permitting easy access to cables and controls.



Fig. 9. Mounting for IP54

NOTE: Further, in order to guarantee IP54, only original Honeywell grommets may be used.

Anti-Rotation Bracket and Screws

If the actuator is to be mounted directly on a damper shaft, use the anti-rotation bracket and screws included in the delivery package. The min. distance between the center of the damper shaft and the middle of the anti-rotation bracket is 85 mm; a max. of 108 mm is allowed (see also Fig. 15).

Depending upon the specifics of your mounting site, the actuator may shift in position slightly while tightening the screws at the top of the shaft adapter. The anti-rotation bracket features a T-piece with a 5-mm-long shank to accommodate for this movement. It is important to ensure that this play is not impeded.

Universal Shaft Adapter

The universal shaft adapter can be used for shafts of various diameters and shapes (round: 8...16 mm and square: 6...13 mm).

WIRING

To avoid personal injury (electrical shock) and to prevent equipment damage, before wiring, you must remove power.

Connecting to the Power Supply

In order to comply with protection class II, the power source of 24 V actuators must be reliably separated from the network power supply circuits as per DIN VDE 0106, part 101.

Access Cover

IMPORTANT

Once the access cover has been removed, please take care to avoid damaging any of the parts now accessible.

The access cover can be unscrewed and removed in order to gain access to the terminal block(s) and perform wiring.



Fig. 10. Access cover

Wiring Diagrams

Modulating: 0[2]...10V, 10...0[2]V



Fig. 11. N05010/N10010 (modulating mode)

Floating: Dir 🔨



Fig. 12. N05010/N10010 (floating mode)

2-Position: Dir 🔿



Fig. 13. N05010/N10010 (2-position mode)

END SWITCHES (max. 230 V, 5 A)



Fig. 14. End switches (Nxx-SW2)

NOTE: Both of the internal end switches must be connected to the same power source.

Table 4 and Table 5 summarize the information presented in the preceding wiring diagrams.

Table 4. Signals at terminal	s
------------------------------	---

ter-		mode				
minal	modulating	floating	2-position			
1	24 V ~/+ (power)	unused or (with feedback) 24 V ~/+ (power)	unused or (with feedback) 24 V ~/+ (power)			
2	common ~/-	common ~/-	common ~/-			
3	0[2]10 V (control)	24 V ~/+ (control signal)	24 V ~/+ (control signal)			
4	24 V ~/+ (override)	24 V ~/+ (control signal)	24 V ~/+ (control signal)			
5	0[2]10 V (feedback)	unused or (with feedback) 010 V	unused or (with feedback) 010 V			
NOTE:	All cables connected to these terminals must be equipped with spark suppression.					

Table 5. Internal end switches (Nxx-SW2)

terminal	type of switch
S1	common lead for switches A and B
S2, S3	change-over switch A (S1/S2 opens and S1/S3 closes when shaft adapter moves CW past 5°; reverts to original state when shaft adapter moves CCW past 5°).
S5, S6	change-over switch B (S1/S5 opens and S1/S6 closes when shaft adapter moves CW past 85°; reverts to original state when shaft adapter moves CCW past 85°).

SPARE PARTS

Anti-Rotation Bracket Kit

Order no.: A7211.2073

Contains:

- 10 anti-rotation brackets
- 20 screws

Spare Parts Kit

Order no.: A7211.2071 Contains:

- 1 anti-rotation bracket + screws
- 2 universal terminal blocks
- 2 strain-relief clamps
- 2 grommets*
- 2 adjustable end stops

*In order to guarantee IP54, only original Honeywell grommets may be used.









Fig. 15. Dimensions (in mm)

Honeywell

DIN EN

ISO 9001

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sarl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative:

Automation and Control Solutions Honeywell GmbH Böblinger Straße 17 D-71101 Schönaich Phone: (49) 7031 63701 Fax: (49) 7031 637493 http://europe.hbc.honeywell.com

Subject to change without notice. Printed in Germany

EN0B-0478GE51 R0905